


The Instruction for WCAM Series WI-FI camera

Camera Models


WP601080A (1080p)
WP600720A (720p)
WP600720B (720p)
WP600300KA (480p)

Connect the WI-FI camera to PC(Windows)

- Install software in the CD (installation manual can be found on the CD);
- Connect the USB Cable into the USB power adapter or a free USB slot on your computer(some USB ports may fail due to insufficient power supply);
- Set your wireless adapter to work in DHCP mode.

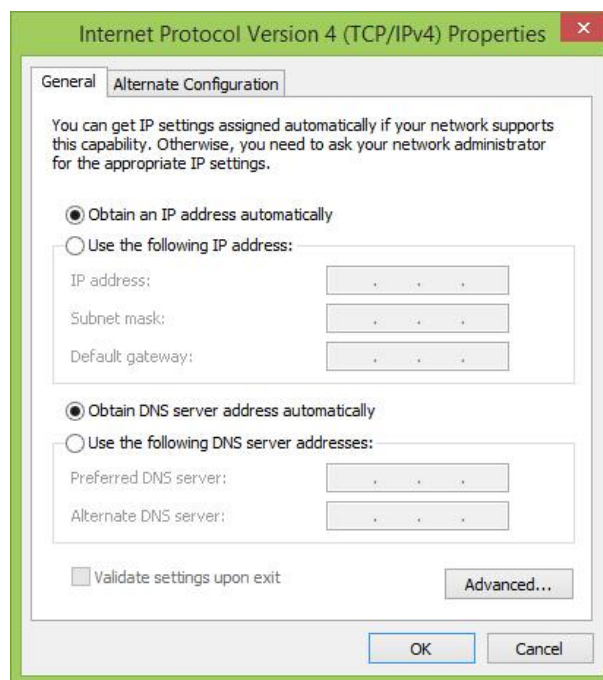


- Find and connect the camera's WI-FI signal, which is a combination of the camera model number and the firmware code, such as WCAM720PA_66ef5b. The Wi-Fi hotspot password is 12345678;

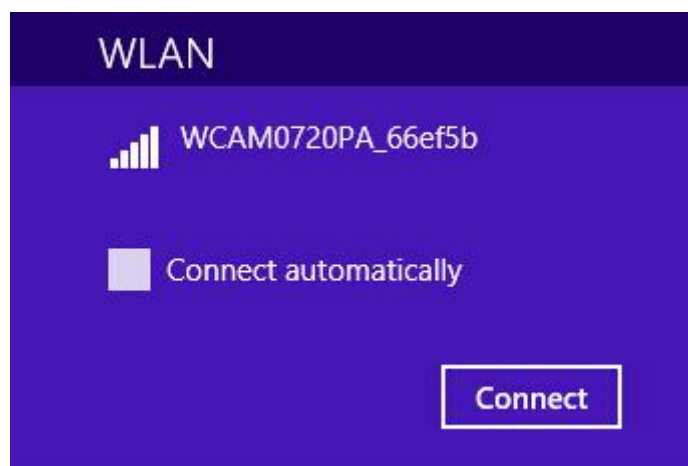

- Run the application and the camera model will be listed on the camera sidebar under the **Camera List** item;


- Click the model name to start the video.

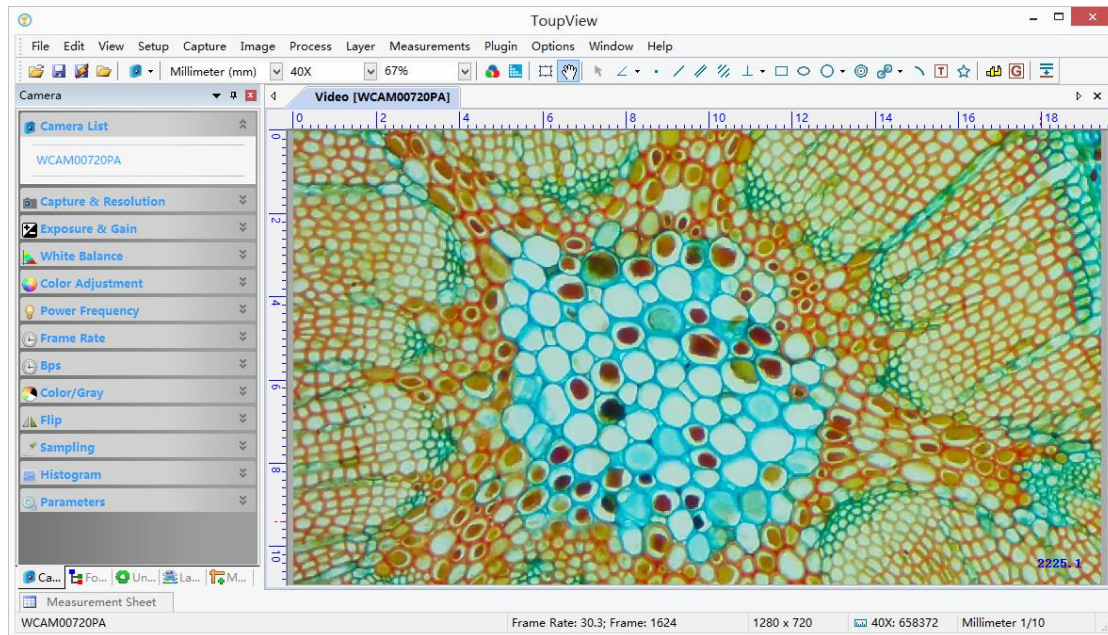

For Windows

Connect the WI-FI camera to iPad or iPhone(IOS)

- Install the software named ToupView for iOS from the App Store;
- Connect the USB Cable into a USB power adapter;
- Open the iPad or iPhone's Wi-Fi and connect the camera's Wi-Fi hotspot, which is a combination of the camera model number and firmware code, such as WCAM720PA_66ef5b. The Wi-Fi hotspot password is 12345678;
- Open the ToupView app on iPad or iPhone and then the video will begin to stream on the screen.

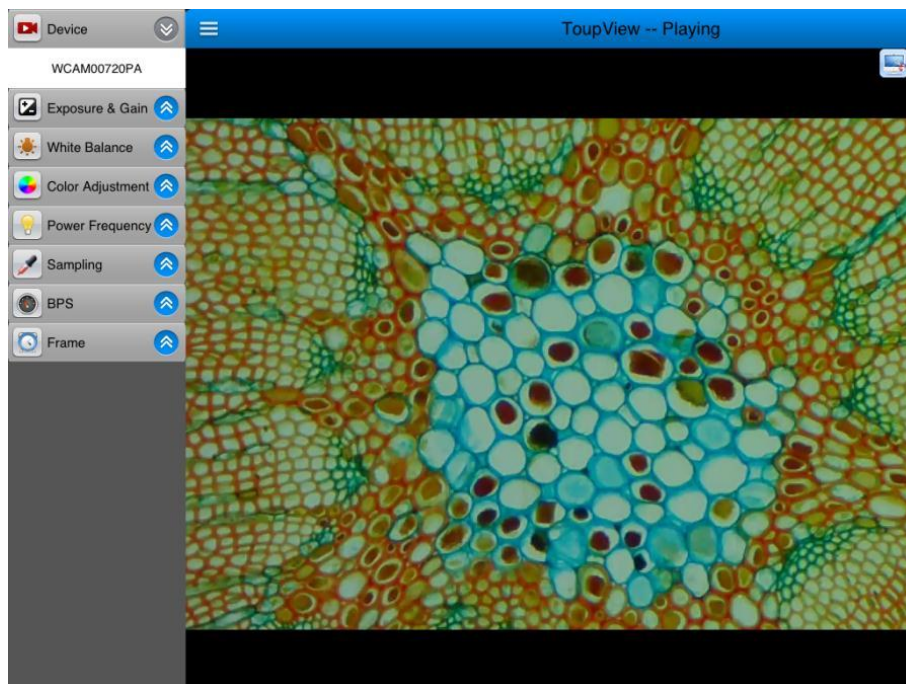


For IOS

Connect the WI-FI camera to PAD or smart phone(Android)

- Install the software named ToupView.apk;
- Connect the USB Cable into a USB power adapter;

- Open the PAD or smart phone's Wi-Fi and connect the camera's Wi-Fi hotspot, which is a combination of the camera model number and firmware code, such as WCAM720PA_66ef5b. The Wi-Fi password is 12345678;
- Open the ToupView app on PAD or smart phone and then the video will begin to stream on the screen.

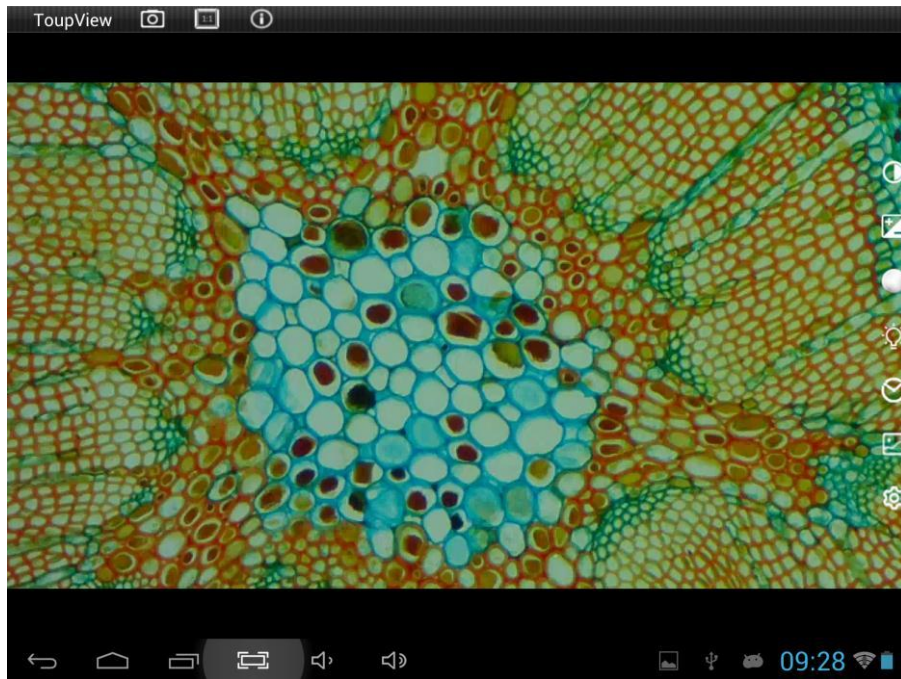

For Android